




1. Gather and identify your parts.

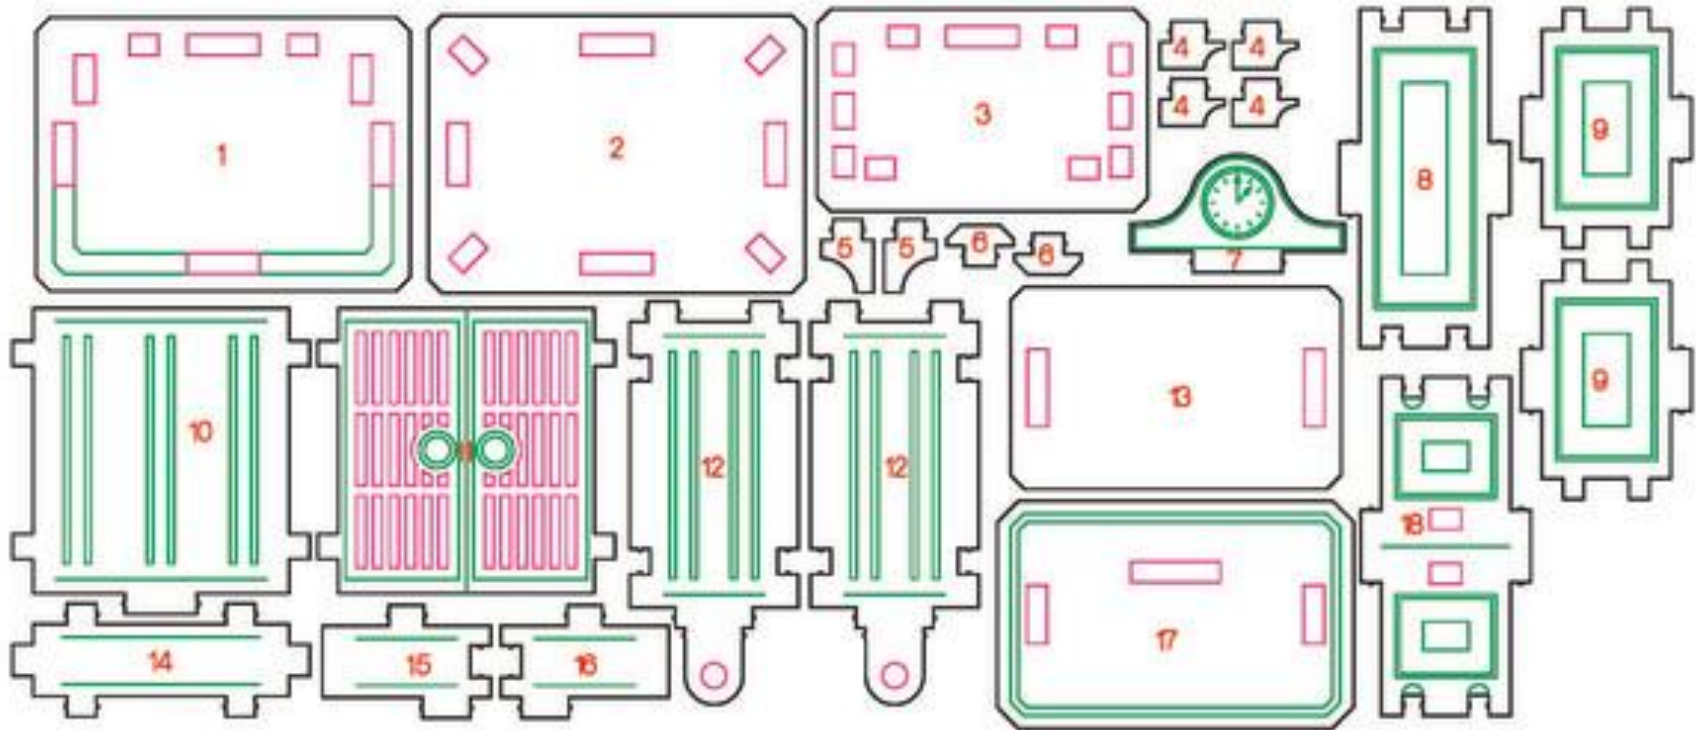


2. Insert the four parts numbered 4 into the bottom of part 2 as shown above. Attach one of the parts numbered 9 to part 8 and part 18. Attach the other part numbered 9 to the other side of parts 18 and 8. This will be called assembly A.

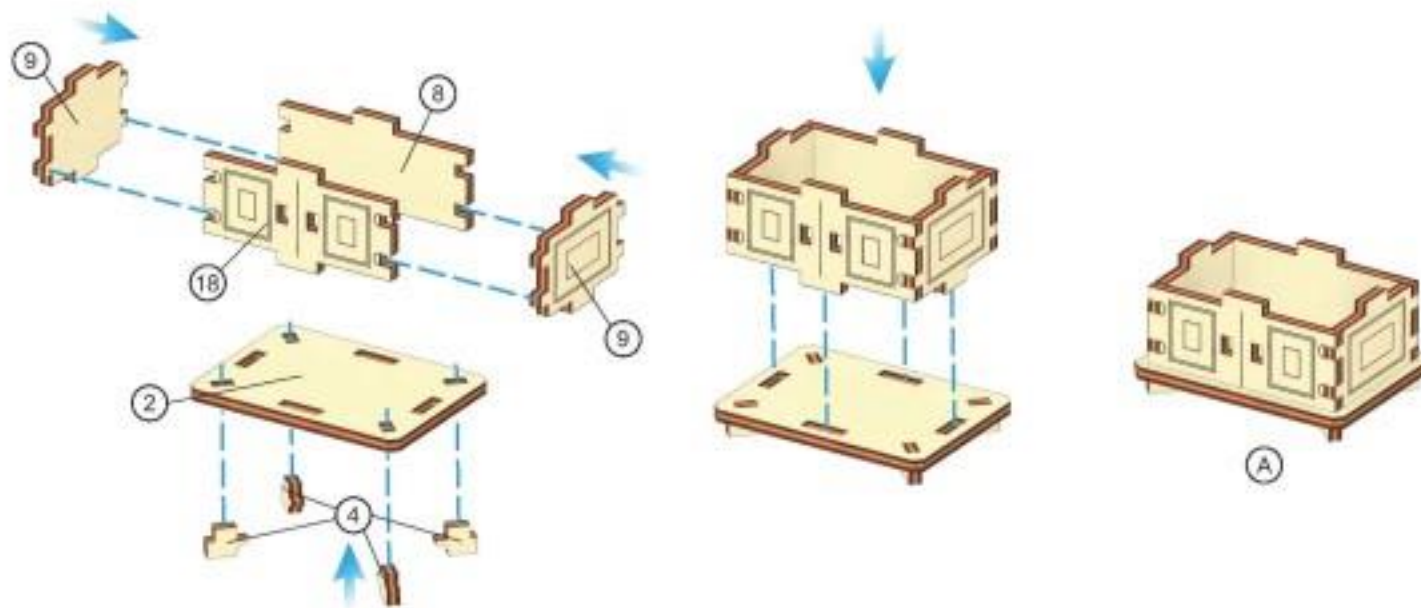


3. Attach part 1 onto assembly A. Attach part 14 to the two parts numbered 15 and then insert that into part 1 as shown above.

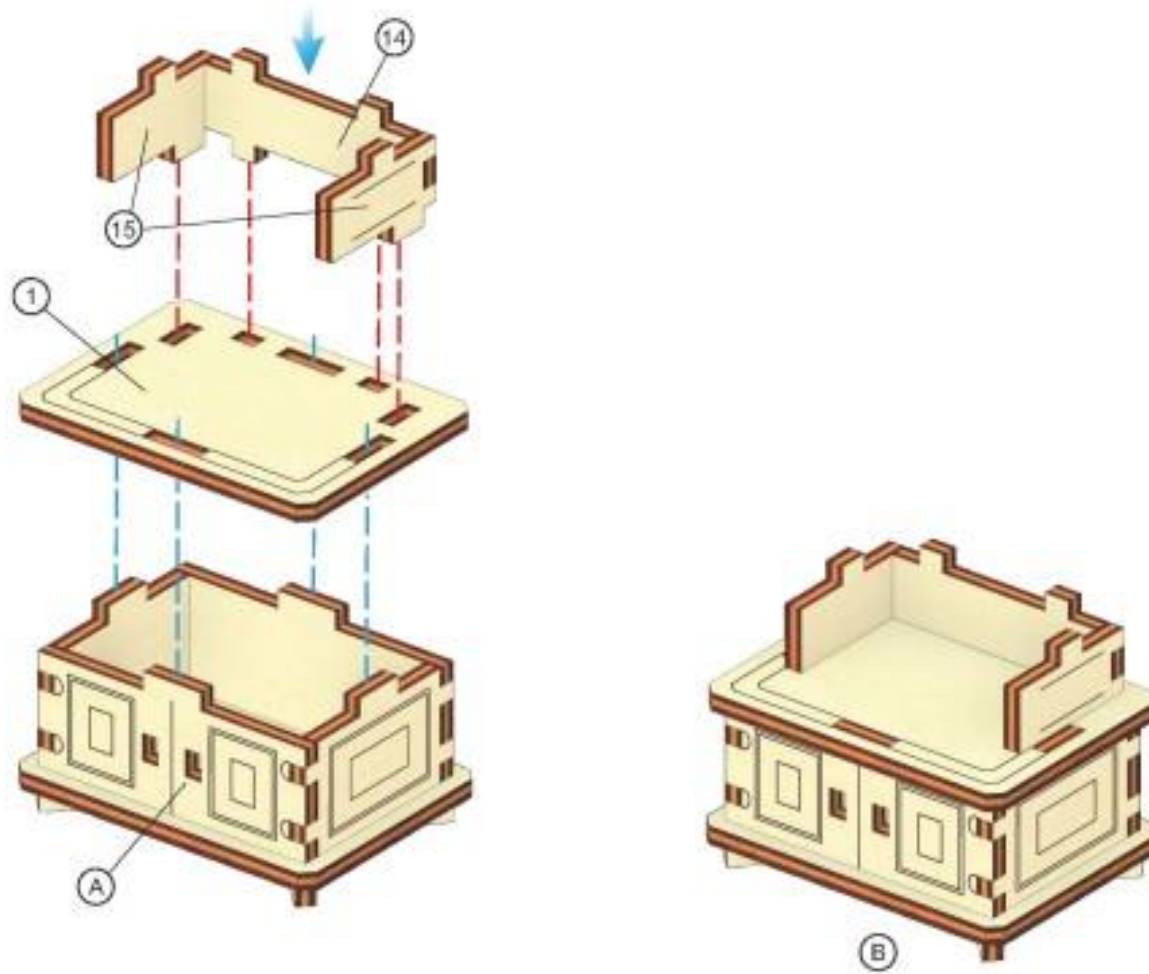


4. Insert the two parts numbered 5 into the bottom of part 3 as shown above. Attach that to the top of the assembly.

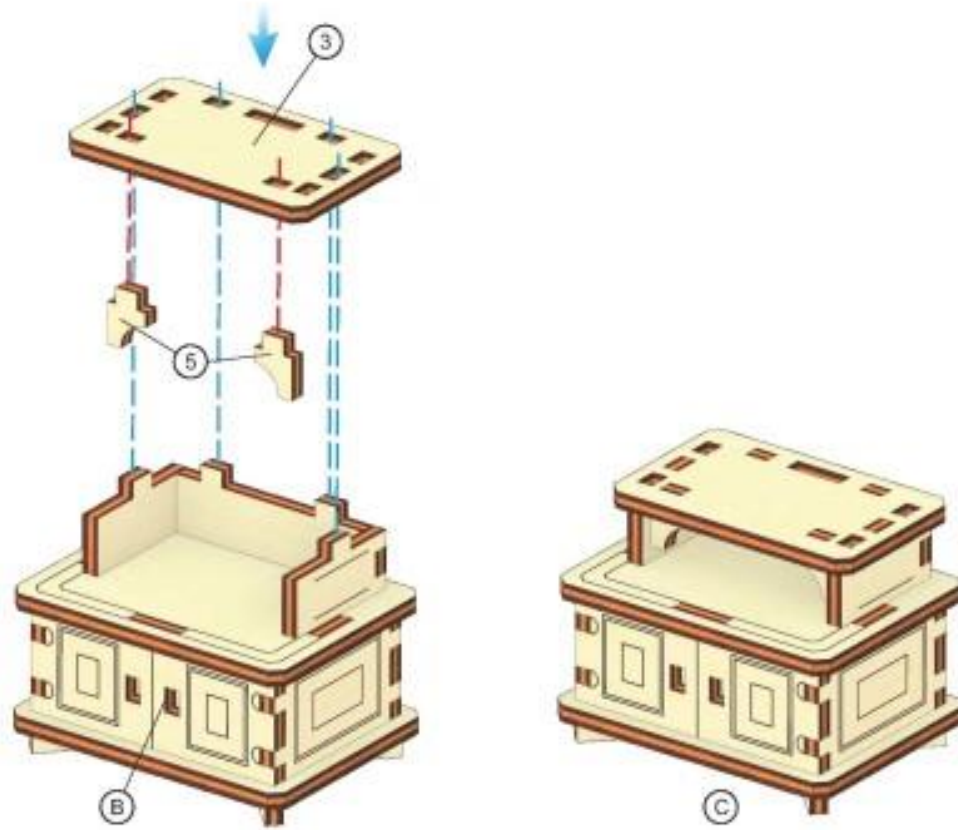

5. Attach parts 10 and 11 to the two parts numbered 12 as shown above. Attach that to the top of the assembly.

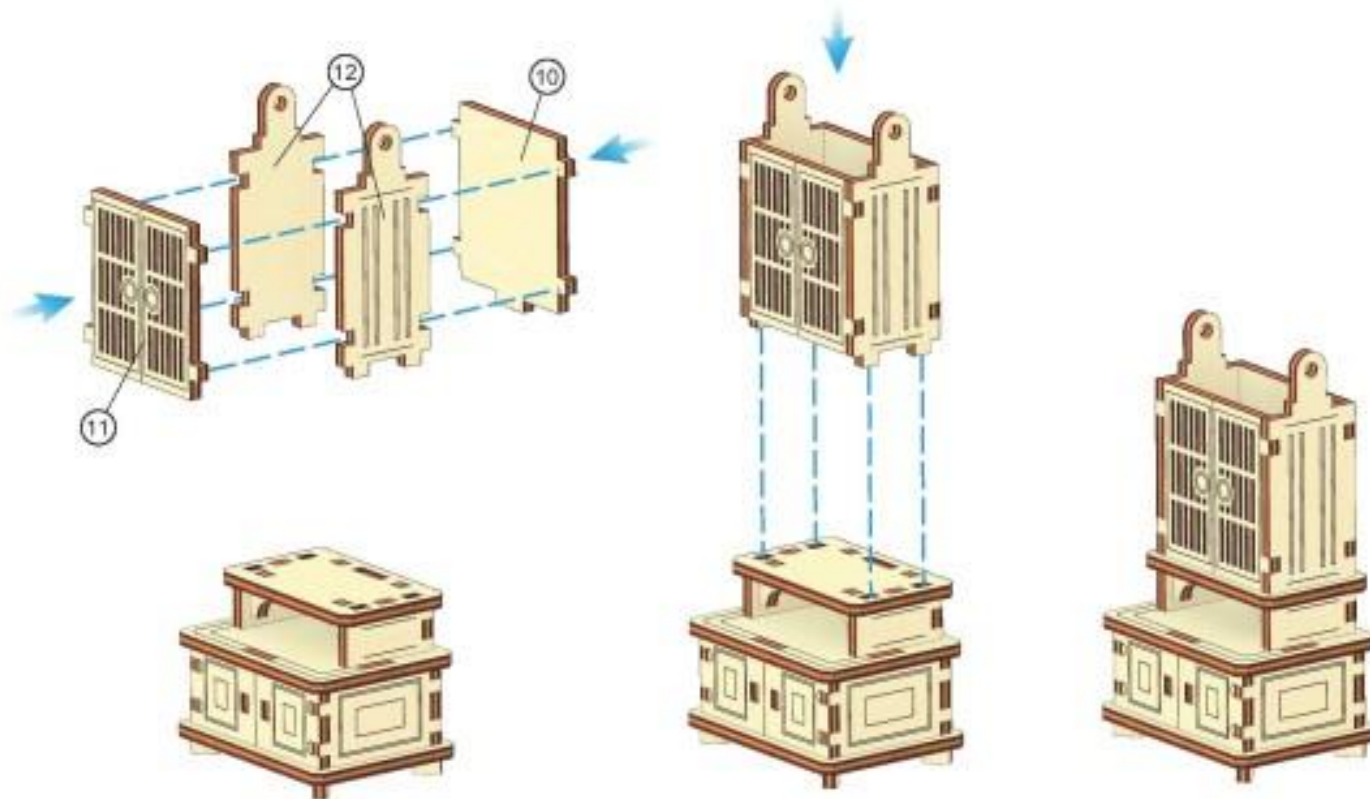

6. Attach the two parts numbered 6 into the front of the assembly. Attach parts 13 and 17 to the top of the assembly. Insert part 7 into the top of part 17.

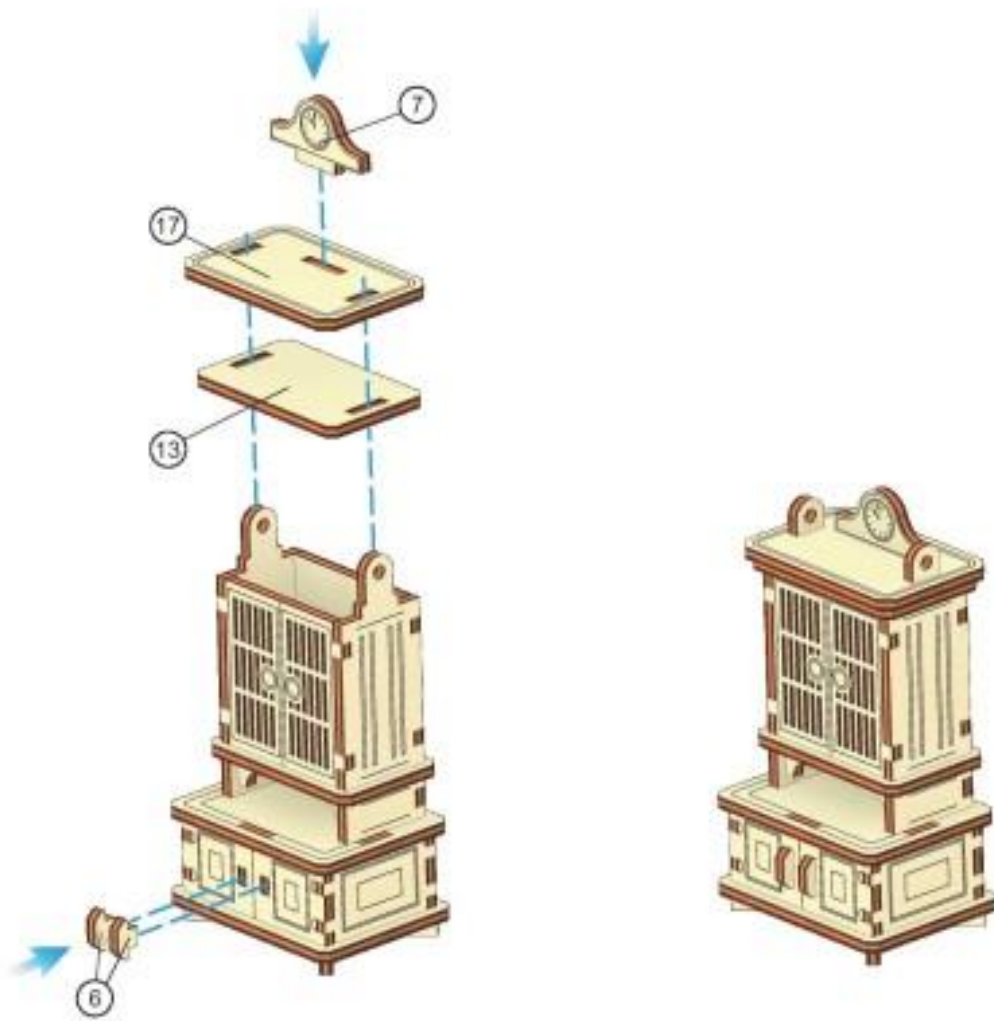

7. Your Miniature Retro Cupboard Ornament 1:20 scale is complete!

