

Assemble


Things You'll Need:

- Wood Glue

- No tools needed


Pieces are made to fit snugly to minimize glue usage. They may require a very firm press to fit together.

1 Gather and Identify Materials

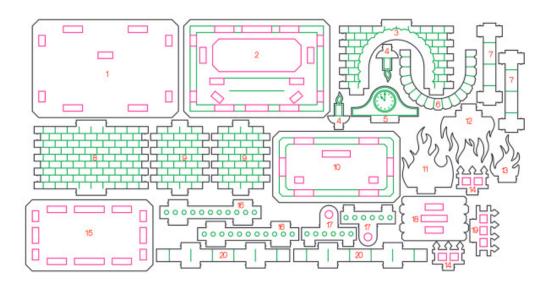

Gather and Identify Materials


2 Assemble Fireplace - Flames

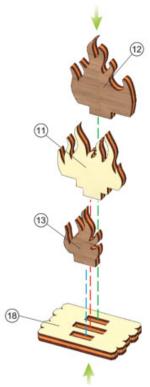

Fit piece 13 (foreground), piece 11 (middle), and piece 12 (background) into slots of piece 18 as shown to construct "A" group




If assembling led lighting - piece 11 will have a strip cut out. affix the led diode inside this strip and secure with glue. wires should protrude from bottom of piece.

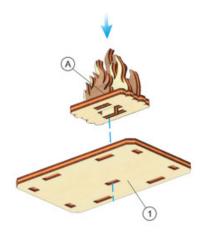


If assembling lighting - piece 1 will have a strip cut out. trail the wires from the led diode light through this strip and continue regular assembly. Use glue as needed to secure the diode and wires.




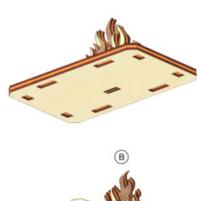



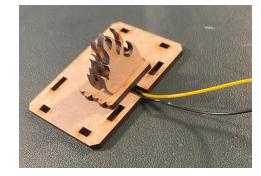


3 Assemble Fireplace - Hearthstone

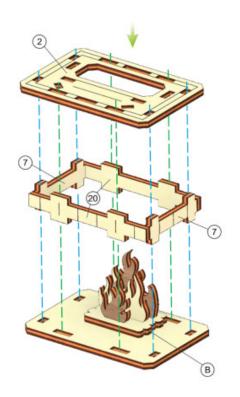




Fit pieces 20 and 7 to group "B" slot holes as shown. Fit piece 2 to tabs of pieces 20 and 7 to finish constructing group "C"

4 Assemble Fireplace - Walls -

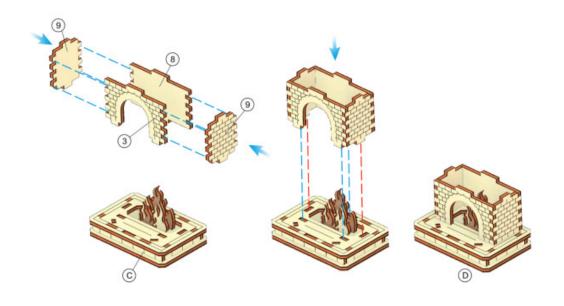


Fit brick wall pieces 3, 8 and 9 to slot holes of group "C" to make group "D"

5 Assemble Fireplace - Mantle

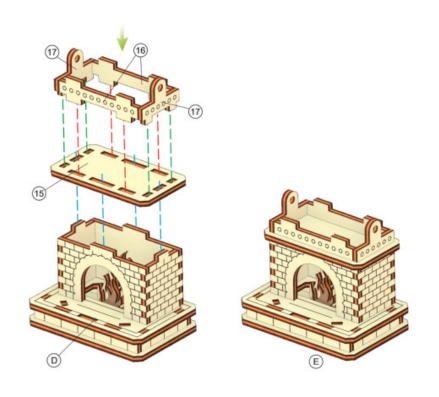



Fit piece 15 to tabs of group "D" as shown. Fit pieces 16 and 17 to slot

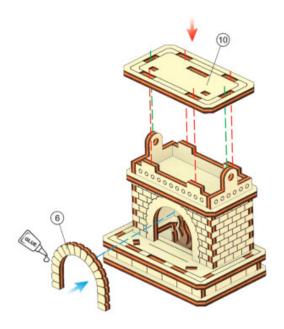



Fit piece 10 on top of group "E" . Glue piece 6 to front of fireplace as shown.

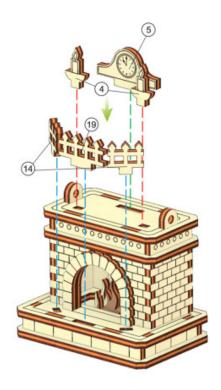

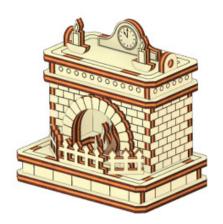

Fit clock, candles, and fireplace fence pieces to remaining slot holes of group "E" as shown.

6 Finished Fireplace



If LED lighting kit version was purchased - the wiring comes pre-assembled using lever nuts - so no soldering is required. If the wires need to be disconnected for assembly purposes - here is the original assembly for you to follow to hook them up again. The wires and light has be pre-tested and sent out in working order. Sometimes the wires need to be "re-connected" to the lever nuts to make sure they have a solid connection.

To connect and disconnect wires from lever nuts - flip up the orange levers and pull wire out/in. Flip the orange lever down to secure wire.

